

## LEARNING THE BASICS



## INSTALLING THE BATTERY

1. Press down on the cover and slide it in the direction of the arrow (1) and then carefully lift the battery cover away from the phone (2).



2. To remove the battery, lift the battery up at each end (1) and remove from the phone (2).



3. To insert the battery, insert the battery into the opening on the back of the phone at an angle (1), making sure the metal contacts on the battery connect with the matching connectors in the phone. Press down until the battery snaps into place (2).



4. Replace the cover plate by lining up the tabs and then firmly sliding the cover in the direction of the arrow (2) until it snaps into place.



**Note:** Make sure the power is off so that you don't lose any stored numbers or messages.

**WARNING!** FOR CONNECTION TO AN ELECTRICAL SUPPLY NOT LOCATED IN NORTH AMERICA, YOU MUST USE AN ADAPTER OF THE PROPER CONFIGURATION FOR THE POWER OUTLET. USE OF THE WRONG ADAPTER COULD DAMAGE YOUR PHONE AND VOID YOUR WARRANTY. IMPORTANT SAFETY INSTRUCTIONS - TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, CAREFULLY FOLLOW THESE INSTRUCTIONS. THIS POWER UNIT IS INTENDED TO BE CORRECTLY ORIENTED IN A VERTICAL OR HORIZONTAL OR FLOOR MOUNT POSITION.

## TURNING YOUR PHONE ON AND OFF

**To turn your phone on:**  
Press and hold to turn your phone on.

**Tip:** The Power Save feature helps to conserve your battery power when you are in an area where there is no signal.

**To turn your phone off:**  
Press for two or more seconds until you see the powering down animation on the display screen.

## MAKING AND ANSWERING CALLS

**To make a call:**

1. Make sure your phone is on.
2. Enter a phone number. (If you make a mistake while dialing, press to erase one digit at a time. Press and hold to erase the entire number.)
3. Press to call.
4. Press or close the phone when you are finished.

**Tip:** To redial your last recent call, press twice.

## TEXT MESSAGING

**To send a text message:**

1. Press for **Menu**.
2. Select **Messaging**.
3. Select **Send Message**. Enter a recipient in the following ways:
  - To enter a phone number or email address, use the keypad to enter the number. When you are finished, press .
  - To send your text message to multiple numbers or addresses, enter the phone number or email address again. When you are finished, press . You can send a text message to a maximum of 10 numbers.
  - To send a text message to a Contact, select **Contact List** and press . A list of your Contacts appears. Highlight the desired Contact and press to add the entry. You can check multiple Contacts (up to a maximum of 10).
4. Enter your message using the keypad. If you wish to change your text options, press the right softkey for **Options**.

## VOICEMAIL

**To set up your voicemail:**

1. Press and hold .
2. Follow the system prompts to create your passcode.

**Note:** You must request this feature from your service provider for it to work correctly.

**To call your voicemail:**

1. Press and hold .

## USING VOICE RECOGNITION

**To place a call using Voice Recognition:**

1. Activate voice recognition by pressing and holding . (The phone prompts you for a command.)
2. Say a Name. (The phone plays the name through the earpiece and displays it on the screen.)
  - If you said a name listed in your Contacts that has more than one number associated with it, the phone displays the different locations (**Mobile, Home, Work, Pager, and Others**) and asks you which one to dial. Say one of the location names and the phone will dial the number for the specified location.

**Note:** If the name isn't valid, or if the phone still doesn't understand the name on the second try, it will not place a call.

## BLUETOOTH CONNECTIONS

**To turn Bluetooth on/off:**

1. Press for **Menu**.
2. Select **Bluetooth**.
3. Select **Enable** and press .

**Bluetooth Status Indicators**

The following icons show your Bluetooth connection status at a glance:

- Bluetooth is active and enabled.
- Bluetooth is connected to a device.
- Bluetooth is hidden.

**Note:** For more information, please see the online User Guide at [www.samsung.com/userguides](http://www.samsung.com/userguides).

## TECHNICAL SPECIFICATIONS

### Network

- Dual band 1x

### Dimensions

- 93 X 47.9 X 17.95mm

### Weight

- 90g

### Display

- Main: 1.9" 176 x 220 65K colors
- Sub: 1.1" 96 x 96 65K colors

### Battery Standard

- Talk time: up to 3.3 hrs
- Standby time: up to 240 hrs

### Memory

- Phone Book: 1000 numbers
- Speed Dial Numbers: 2-99 (98 numbers)
- Multimedia: Ringtones, Screen Savers, Games, and Applications
- Messaging: 240 messages

### Bluetooth Supported Profiles

- Supports HSP, HFP, DUN, OPP

### Features

- Alarm Clock
- Calculator
- Calendar
- Memo Pad
- World Time
- Voice Dial

## THE FINE PRINT

**Samsung Electronics Canada Inc.**

Customer Care Centre

1.800.SAMSUNG



[www.samsung.ca](http://www.samsung.ca)

Many of the services and features described above are network dependent and may require additional subscription and/or usage charges. Not all features are available for purchase or use in all areas.

Please Note: Standby and talk times will vary depending on phone usage patterns and conditions. Battery power consumption depends on factors such as network configuration, signal strength, operating temperature, features selected, frequency of call, and voice, data and other application usage patterns.

Compatibility with all Bluetooth® and Pictbridge™ equipment is not guaranteed. The Bluetooth technology trademarks are owned by Bluetooth SIG, Inc., USA and used by Samsung Electronics Co. Ltd. under license.

Bell Mobility and its designs are trademarks of Bell Canada. Features may require subscription to Bell Mobility services and conditions may apply. Contact Bell Mobility Customer Service for details or visit [www.bell.ca](http://www.bell.ca).

Windows Live and Hotmail are either registered trade-marks or trade-marks of Microsoft Corporation in the United States and/or other countries.

© 2009 Samsung Electronics Canada Inc. All rights reserved. Samsung is a registered trademark of Samsung Electronics Co. Ltd. and its related entities. Specifications subject to change without notice.

GH68-26938A